


Fitting




the Mini Mark II Facia

1

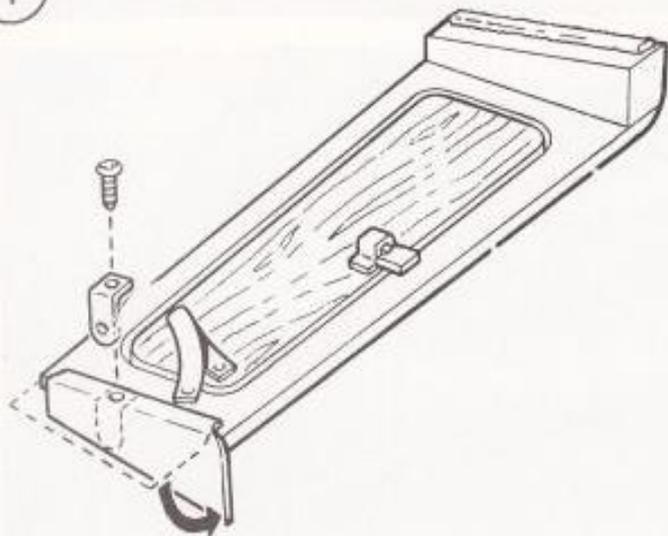


Screw door pulls into holes in face of cubby lids.

2

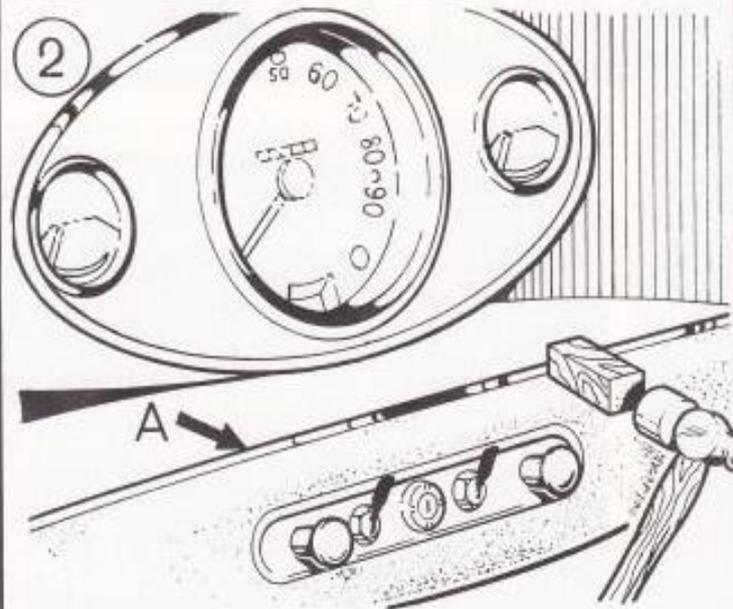


Remove chrome strip (A) by knocking it off the top edge of parcel tray.

3

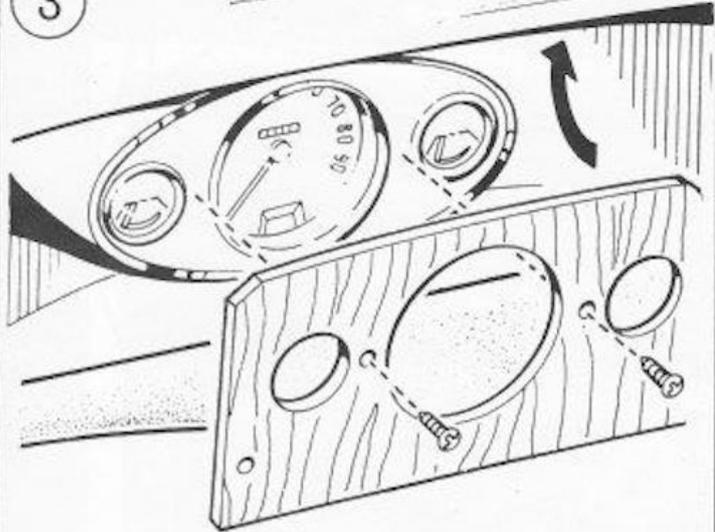


Position polished centre panel to fit over speedo, oil and temperature gauges, and fix by screwing the two No. 4 self tapping screws straight into the plastic instrument mask. Drill $\frac{3}{16}$ " or 1.5mm holes.

4

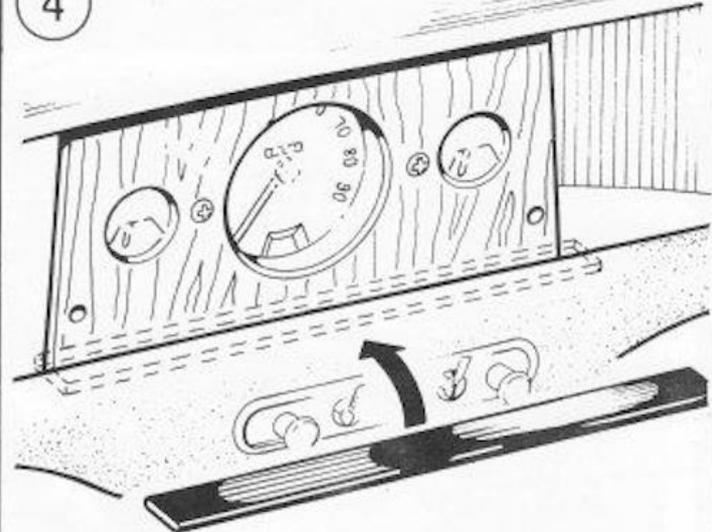


Place the trimmed strip supplied on to the trimmed parcel shelf rail, to fit back to polished face of centre panel, fix in position using impact adhesive (Evostik, Bostik, etc.).

5

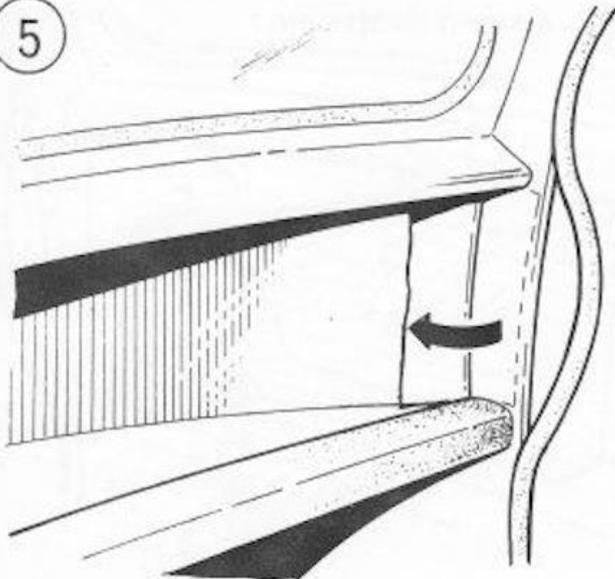


Pull off the door piping locally between the metal screen rail and parcel shelf rail, to release the trimming from around the door frame pillar, so that the trimmed casing lining the back of the parcel shelf can be pressed back (in direction of arrow) to enable the polished side panels to be fitted.

5A

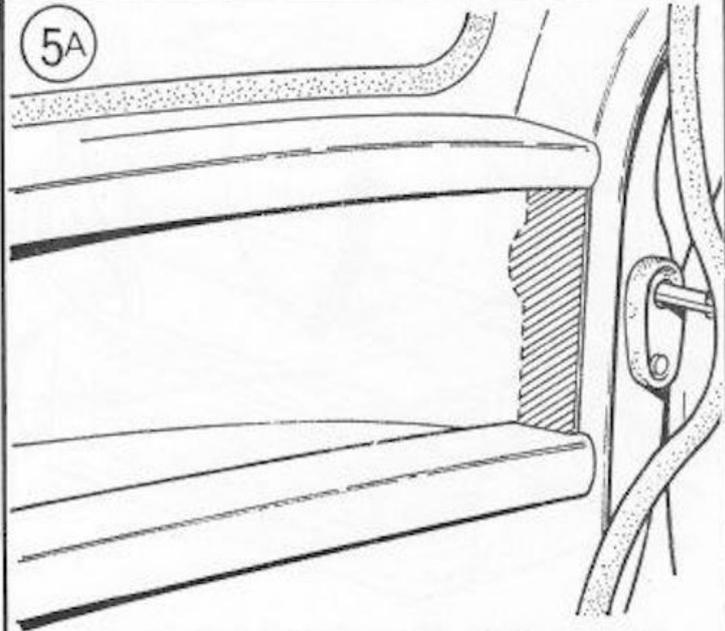

For 1970 models with metal door check straps. Cut away the trimmed casing as shown at shaded area in diagram to allow free movement of check strap when opening or closing car doors after side panels are fitted. Take care not to cut wiring harness.


6

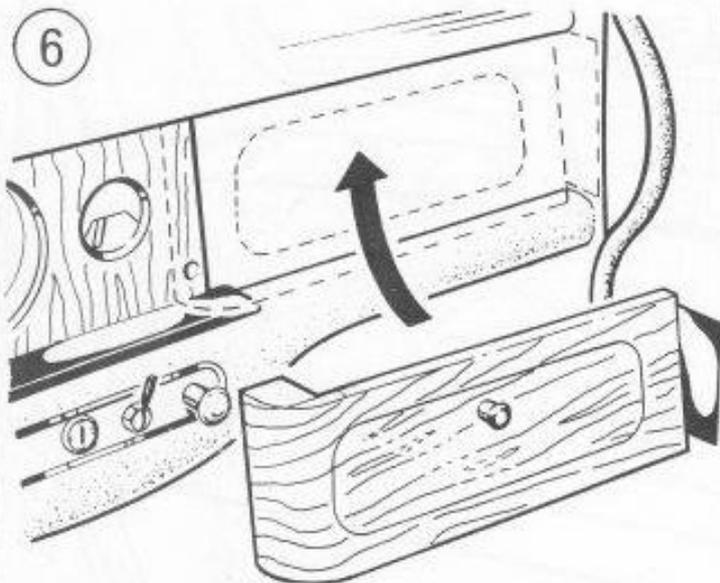

Position polished side panels so that the top edge goes up behind metal screen rail and bottom edge rests on trimmed parcel shelf rail, the radiussed ends to rest against face of centre panel. Push the panels outwards to fit tight against sides of car.


6A

AIR VENT MODELS ONLY

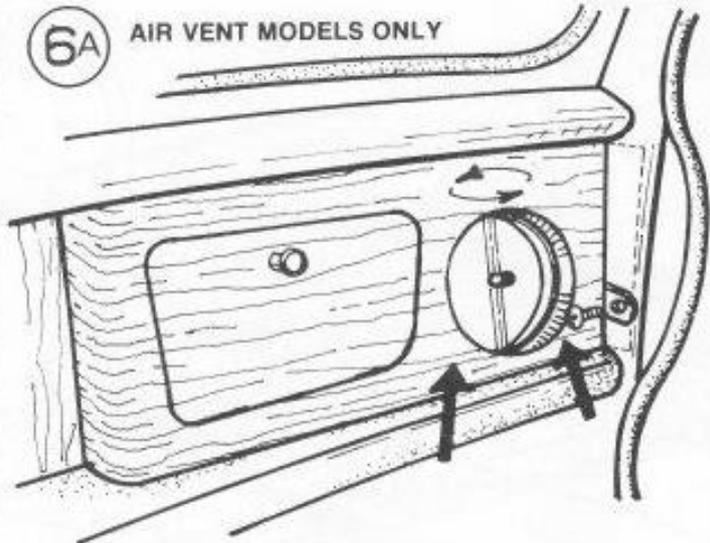


Position polished side panels so that the top edge goes up behind metal screen rail and bottom edge rests on trimmed parcel shelf rail, the radiussed ends to rest against face of centre panel. Swivel air vent round as shown to avoid damage whilst drilling through bracket. Press very firmly back only where arrowed to avoid splitting end panel.

7

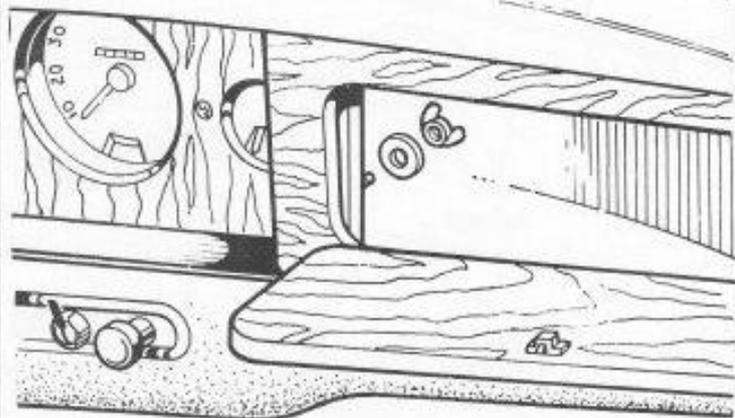

Assemble sides to centre panel using wing nuts and washers supplied in kit.

8

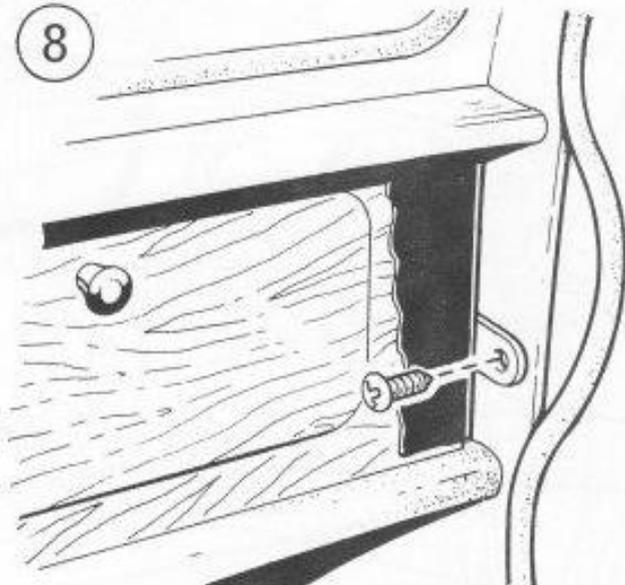

Fold trim pieces on ends of panels on to polished face and drill through the two brackets using No. 44 or $\frac{3}{32}$ " drill, fix with $\frac{1}{2}$ " \times No. 4 Rnd. Hd. self tapping screws supplied TAKE CARE NOT TO MARK POLISHED FACE WITH DRILL CHUCK. Fold back trim pieces to cover screws and brackets and tuck edge of trims behind door frame piping. Repeat for remaining panel.

Rokee Ltd 26, Queen's Road, Coventry CV1 3DQ
Tel: 28689